

---

## TROUBLESHOOTING GUIDE

---

### **Engine Does Not Start -**

#### *Starter Motor Won't Turn*

- Engine stop switch off
- Clutch lever not pulled in and transmission not in neutral
- Fuse blown
- Battery leads do not make good electrical contact with battery terminals
- Battery discharged

#### *Engine Cranks, But Won't Start*

- No fuel in tank
- Fuel line clogged
- Fuel broken down
- Choke is not used when engine is cold
- Engine flooded
- Spark plugs not in good contact

- Spark plugs fouled or wet
- Incorrect spark plug gap
- Battery discharged

### **Engine Stalls -**

#### *Just When Shifting Into 1st Gear*

- Side stand has been left down
- Clutch does not properly disengage

#### *While Riding*

- Choke is used too long after moving off
- No fuel in tank
- Fuel tap is turned off
- Fuel tank air vent is obstructed
- Overheating
- Battery discharged