

---

## MAINTENANCE AND ADJUSTMENT

---

The maintenance and adjustments outlined in this chapter must be carried out in accordance with the Periodic Maintenance Chart to keep the motorcycle in good running condition. **The initial maintenance is vitally important and must not be neglected.**

With a basic knowledge of mechanics and the proper use of tools, you should be able to carry out many of the maintenance items described in this chapter. If you lack proper experience or doubt your ability, all adjustments, maintenance, and repair work should be completed by a qualified technician.

Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect or improper adjustment made by the owner.

## EMISSION CONTROL INFORMATION

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board. Additionally, Kawasaki has incorporated an evaporative emission control system (3) in compliance with applicable regulations of the United States Environmental Protection Agency.

### 1. Crankcase Emission Control System

This system eliminates the release of crankcase vapors into the atmosphere. Instead, the vapors are routed through an oil separator to the intake side of the engine. While the engine is operating, the vapors are drawn into the combustion chamber, where they are burned along with the fuel and air supplied by the fuel injection system.

### 2. Exhaust Emission Control System

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel, ignition and exhaust systems of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels. The exhaust system of this model motorcycle includes a catalytic converter system.

### **3. Evaporative Emission Control System**

The evaporative emission control system for this vehicle consists of low permeation fuel hoses and fuel tank.

### **3. Evaporative Emission Control System (California model only)**

Vapors caused by fuel evaporation in the fuel system are not vented into the atmosphere. Instead, fuel vapors are routed into the running engine to be burned, or stored in a canister when the engine is stopped. Liquid fuel is caught by a vapor separator and returned to the fuel tank.

### **High Altitude Performance Adjustment Information**

High altitude adjustment is not required.

## **MAINTENANCE AND WARRANTY**

Proper maintenance is necessary to ensure that your motorcycle will continue to have low emission levels. This Owner's Manual contains those maintenance recommendations for your motorcycle. Those items identified by the Periodic Maintenance Chart are necessary to ensure compliance with the applicable standards.

As the owner of this motorcycle, you have the responsibility to make sure that the recommended maintenance is carried out according to the instructions in this Owner's Manual at your own expense.

## 174 MAINTENANCE AND ADJUSTMENT

The Kawasaki Limited Emission Control System Warranty requires that you return your motorcycle to an authorized Kawasaki dealer for remedy under warranty. Please read the warranty carefully, and keep it valid by complying with the owner's obligations it contains.

You should keep a maintenance record for your motorcycle. To assist you in keeping this record, we have provided space on pages 271 through 274 of this manual where an authorized Kawasaki dealer, or someone equally competent, can record the maintenance. You should also retain copies of maintenance work orders, bills, etc., as verification of this maintenance.

## **TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:**

Federal law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- \* Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- \* Removal of the muffler(s) or any internal portion of the muffler(s).
- \* Removal of the air box or air box cover.
- \* Modifications to the muffler(s) or air intake system by cutting, drilling, or other means if such modifications result in increased noise levels.

## Periodic Maintenance Chart

### 1. Periodic Inspection (Engine Related Items)

Frequency	Whichever comes first →								See Page
	↓	*Odometer Reading km × 1 000 (mile × 1 000)							
Operation (Engine Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Valve clearance - inspect						●			203
Throttle control system (play, smooth return, no drag) - inspect	year	●		●		●		●	212
Engine vacuum synchronization - inspect				●		●		●	214
Idle speed - inspect		●		●		●		●	215

Frequency	Operation (Engine Items)	Whichever comes first ↓ Every	*Odometer Reading km × 1 000 (mile × 1 000)						See Page	
			1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)		36 (22.5)
K	Fuel leak (fuel hose and pipe) - inspect	year	●		●		●		●	—
K	Fuel hoses damage - inspect	year	●		●		●		●	—
K	Fuel hoses installation condition - inspect	year	●		●		●		●	—
	Coolant level - inspect		●		●		●		●	199
	Coolant leak - inspect	year	●		●		●		●	197

## 178 MAINTENANCE AND ADJUSTMENT

Frequency	Whichever comes first ↓ →	*Odometer Reading km × 1 000 (mile × 1 000)							See Page
		Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	
Radiator hose damage - inspect	year	•		•		•		•	197
Radiator hoses installation condition - inspect	year	•		•		•		•	197
Evaporative emission control system - function (California model only)		•	•	•	•	•	•	•	202
Air suction system damage - inspect				•		•		•	204





## 180 MAINTENANCE AND ADJUSTMENT

Frequency	Whichever comes first								See Page
	↓	→ *Odometer Reading km × 1 000 (mile × 1 000)							
Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Clutch hose installation condition - inspect	year	•	•	•	•	•	•	•	—
Final gear case oil level - inspect #				•		•		•	193
<b>Wheels and tires:</b>									
Tire air pressure - inspect	year			•		•		•	231
Wheels/tires damage - inspect				•		•		•	232

Frequency	Whichever comes first ↓	*Odometer Reading km × 1 000 (mile × 1 000)							See Page
		→	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	
Operation (Chassis Items)	Every								
Tire tread wear, abnormal wear - inspect				●		●		●	232
Wheel bearings damage - inspect	year			●		●		●	—
<b>Brake system:</b>									
Brake fluid leak - inspect	year	●	●	●	●	●	●	●	218
Brake hoses and pipe damage - inspect	year	●	●	●	●	●	●	●	218
Brake pad wear - inspect #			●	●	●	●	●	●	218



Frequency	Whichever comes first ↓	*Odometer Reading km × 1 000 (mile × 1 000)							See Page
		→ Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	
<b>Suspensions:</b>									
Front forks/rear shock absorber operation (damping and smooth stroke) - inspect				•		•		•	223/ 227
Front forks/rear shock absorber oil leak - inspect	year			•		•		•	223/ 227
<b>K</b> Uni-trak rocker arm operation - inspect				•		•		•	—

## 184 MAINTENANCE AND ADJUSTMENT

Frequency	Whichever comes first →								See Page
	↓	*Odometer Reading km × 1 000 (mile × 1 000)							
Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
<b>K</b> Uni-trak tie rods operation - inspect				•		•		•	—
<b>Steering system:</b>									
<b>K</b> Steering play - inspect	year	•		•		•		•	—
<b>K</b> Steering stem bearings - lubricate	2 years					•			—
<b>Electrical system:</b>									
Lights and switches operation - inspect	year			•		•		•	—

Frequency	Whichever comes first ↓	*Odometer Reading km × 1 000 (mile × 1 000)							See Page
		→ Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	
Headlight aiming - inspect	year			•		•		•	244
Side stand switch operation - inspect	year			•		•		•	—
Engine stop switch operation - inspect	year			•		•		•	—
<b>Chassis:</b>									
Chassis parts - lubricate	year			•		•		•	248
Bolts and nuts tightness - inspect		•		•		•		•	255

## 3. Periodic Replacement

Change/Replacement Items	Frequency	*Odometer Reading km × 1 000 (mile × 1 000)					See Page
	Whichever comes first ↓ Every	1 (0.6)	12 (7.5)	24 (15)	36 (22.5)	48 (30)	
Air cleaner element # - replace	every 18 000 km (11 250 mile)						205
<b>K</b> Engine oil # - change	year	●	●	●	●	●	190
<b>K</b> Oil filter - replace	year	●	●	●	●	●	190
<b>K</b> Fuel hoses - replace	5 years						–
<b>K</b> Coolant - change	3 years				●		201
<b>K</b> Radiator hoses and O-rings - replace	3 years				●		–
<b>K</b> Brake or clutch hoses - replace	4 years					●	–
<b>K</b> Brake or clutch fluid (front and rear) - change	2 years			●		●	217/ 220



Change/Replacement Items	Frequency	*Odometer Reading km × 1 000 (mile × 1 000)					See Page
	Whichever comes first ↓ Every	1 (0.6)	12 (7.5)	24 (15)	36 (22.5)	48 (30)	
<b>K</b> Rubber parts of master cylinder and caliper (or slave cylinder) - replace	4 years					●	–
Spark plug - replace			●	●	●	●	201
Final gear case oil - change		●	●	●	●	●	194

K: Should be serviced by an authorized Kawasaki dealer.

\*: For higher odometer readings, repeat at the frequency interval established here.

#: Service more frequently when operating in severe conditions: dusty, wet, muddy, high speed, or frequent starting/stopping.

## Engine Oil

In order for the engine, transmission, and clutch to function properly, maintain the engine oil at the proper level, and change the oil and replace the oil filter in accordance with the Periodic Maintenance Chart. Not only do dirt and metal particles collect in the oil, but the oil itself loses its lubricative quality if used too long.

### WARNING

**Motorcycle operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine or transmission seizure, accident, and injury. Check the oil level before each ride and change the oil according to the periodic maintenance chart in the Owner's Manual.**


### *Oil Level Inspection*

- If the oil has just been changed, start the engine and run it for several minutes at idle speed. This fills the oil filter with oil. Stop the engine, then wait several minutes until the oil settles.

### **NOTICE**

**Racing the engine before the oil reaches every part can cause engine seizure.**

- If the motorcycle has just been used, wait several minutes for all the oil to drain down.
- Check the engine oil level through the oil level gauge. With the motorcycle held level, the oil level should come up between the upper and lower level lines next to the gauge.

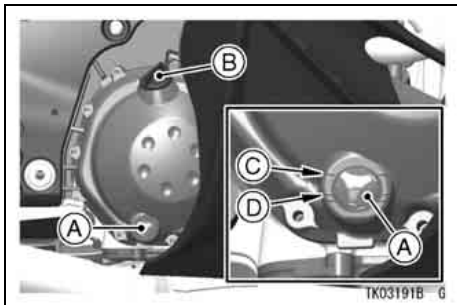

- A. Oil Level Gauge
- B. Oil Filler Cap
- C. Upper Level Line
- D. Lower Level Line

- If the oil level is too high, remove the excess oil through the oil filler opening using a syringe or some other suitable device.

- If the oil level is too low, add oil to reach the correct level. Use the same type and brand of oil that is already in the engine.

### NOTICE

**If the engine oil gets extremely low or if the oil pump does not function properly or oil passages are clogged, the oil pressure warning indicator light will go on. If it stays on when the engine speed is above idle, stop the engine immediately and have it serviced. Failure to do so could cause serious engine damage.**

## 190 MAINTENANCE AND ADJUSTMENT




**A. Oil Pressure Warning Indicator Light**


### *Oil and/or Oil Filter Change*

- To change the engine oil and replace oil filter, the engine oil drain bolt and oil filter must be removed. The oil

change and oil filter replacement should be done by an authorized Kawasaki dealer.

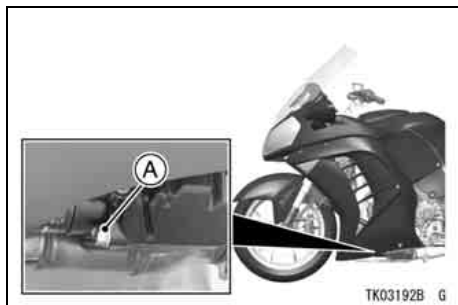

**A. Engine Oil Drain Bolt**

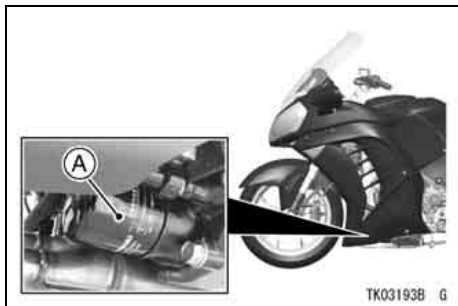

A. Oil Filter

**⚠ WARNING**

**Motor oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.**

**Tightening Torque**

Engine Oil Drain Bolt:  
 30 N·m (3.1 kgf·m, 22 ft·lb)  
 Oil Filter:  
 17 N·m (1.7 kgf·m, 13 ft·lb)

**Recommended Engine Oil**

Type:  
 Kawasaki Performance 4-Stroke  
 Motorcycle Oil\*  
 Kawasaki Performance 4-Stroke  
 Semi-Synthetic Oil\*  
 Kawasaki Performance 4-Stroke Full  
 Synthetic Oil\*  
 or other 4-stroke oils with API SG, SH,  
 SJ, SL, SM and JASO MA, MA1, MA2  
 rating  
 Viscosity:  
 SAE10W-40

## Engine Oil Capacity


### Capacity:

- 4.0 L (4.2 US qt) (when filter is not removed)
- 4.4 L (4.7 US qt) (when filter is removed)
- 4.7 L (5.0 US qt) (when engine is completely dry)

### NOTE

- *Do not add any chemical additive to the oil. Oils fulfilling the above requirements are fully formulated and provide adequate lubrication for both the engine and the clutch.*

Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

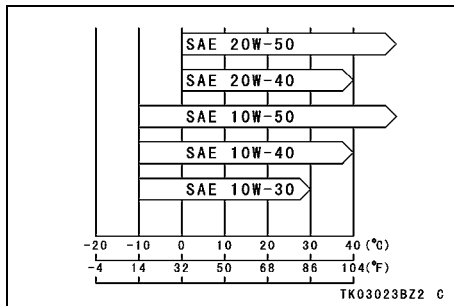

\*Kawasaki Performance Oils and Lubricants have been specifically engineered for your vehicle. Consistent use of these products meets or exceeds warranty and service requirements and can help to extend the life of your Kawasaki.

## Final Gear Case Oil

In order for the pinion and ring gears in the final gear case to function properly, check the oil level, and change the oil in accordance with the Periodic Maintenance Chart.

### **WARNING**

**Motorcycle operation with insufficient, deteriorated, or contaminated oil causes accelerated wear of the differential, pinion, and ring gears and may result in seizure. Seizure can lock the rear wheel and skid the rear tire, with consequent loss of control. Check the differential oil according to the periodic maintenance chart.**

### *Oil Level Inspection*


- Use the center stand by holding the motorcycle vertical on level ground.
- Remove the filler cap.

### **NOTICE**

**Be careful not to allow any dirt or foreign materials to enter the gear case.**

## 194 MAINTENANCE AND ADJUSTMENT

- Check the oil level. If it is low, add oil as necessary. The oil level should come to the top thread of the filler opening with the motorcycle held vertical on level ground.

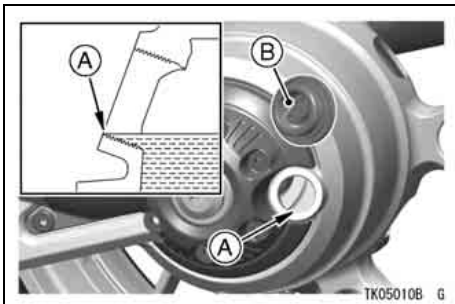

- A. Top Thread
- B. Filler Cap

### NOTE

- Use the same type and brand of oil that is already in the final gear case.

### Oil Change


### NOTE

- Final gear case oil drains easily and picks up any sediment when the oil is warmed up by running the motorcycle.
- Put the motorcycle on its side stand.
- Place an oil pan beneath the gear case.
- Remove the filler cap and drain bolt.

### **⚠ WARNING**

**Gear case oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.**



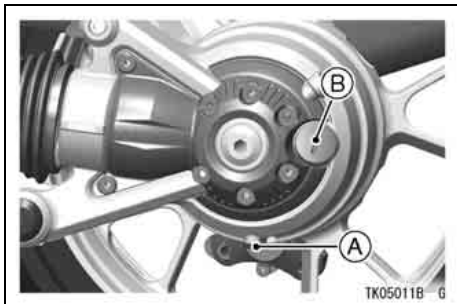

- A. Drain Bolt  
B. Oil Filler Cap

### **⚠ WARNING**

**Oil on tires can make them slippery which can cause an accident and injury. When draining or filling the gear case, be careful that no oil gets on the tires or rims. Clean off any oil that inadvertently gets on them with soap and water.**

- After the oil has completely drained out, install the drain bolt and a new gasket.
- With the motorcycle held vertical on level ground, fill the gear case up to the top thread of the filler opening with the oil specified below without turning the rear tire.
- If the rear tire is turned, it is necessary to leave it for about six minutes.

### **Final Gear Case Oil**

Oil Capacity	about 160 mL (5.41 US oz.)
Oil Type	API "GL-5" Hypoid gear oil above 5°C (41°F) SAE 90 below 5°C (41°F) SAE 80

### **NOTE**

- "GL-5" indicates a quality and additive rating. "GL-6" rated hypoid gear oils can also be used.

## 196 MAINTENANCE AND ADJUSTMENT

- Install the filler cap.

### Cooling System

#### Radiator and Cooling Fan -

Check the radiator fins for obstruction by insects or mud. Clean off any obstructions with a stream of low-pressure water.

 **WARNING**

**The cooling fan spins at high speed and can cause serious injuries. Keep your hands and clothing away from the cooling fan blades at all times.**

**NOTICE**

**Using high-pressure water, as from a car wash facility, could damage the radiator fins and impair the radiator's effectiveness. Do not obstruct or deflect airflow through the radiator by installing unauthorized accessories in front of the radiator or behind the cooling fan. Interference with the radiator airflow can lead to overheating and consequent engine damage.**

**Radiator Hoses -**

Check the radiator hoses for leakage, cracks or deterioration, and connections for leakage, or looseness each day before riding the motorcycle, and in accordance with the Periodic Maintenance Chart.

**Coolant -**

Coolant absorbs excessive heat from the engine and transfers it to the air at the radiator. If the coolant level becomes low, the engine overheats and may suffer severe damage. Check the coolant level each day before riding the motorcycle, also in accordance with the periodic maintenance chart and replenish coolant if the level is low. Change the coolant in accordance with the Periodic Maintenance Chart.

*Information for Coolant*

To protect the cooling system (consisting of the aluminum engine and radiator) from rust and corrosion, the use of corrosion and rust inhibitor chemicals in the coolant is essential. If coolant containing corrosion and rust inhibitor chemicals are not used, over a period of time, the cooling system

accumulates rust and scale in the water jacket and radiator. This will clog up the coolant passages, and considerably reduce the efficiency of the cooling system.

 **WARNING**

**Coolant containing corrosion inhibitors for aluminum engines and radiators include harmful chemicals for human body. Drinking coolant can result in serious injury or death. Use coolant in accordance with the instructions of the manufacturer.**

Soft or distilled water must be used with the antifreeze (see below for antifreeze) in the cooling system.

**NOTICE**

**If hard water is used in the system, it causes scale accumulation in the water passages, and considerably reduces the efficiency of the cooling system.**

If the lowest ambient temperature encountered falls below the freezing point of water, use permanent antifreeze in the coolant to protect the cooling system against engine and radiator freeze-up, as well as from rust and corrosion.

Use a permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators) in the cooling system. On the mixture ratio of coolant, choose the suitable one referring to the relation between freezing point and strength directed on the container.

**NOTICE**

**Permanent types of antifreeze on the market have anti-corrosion and anti-rust properties. When it is diluted excessively, it loses its anti-corrosion property. Dilute a permanent type of antifreeze in accordance with the instructions of the manufacturer.**


**NOTE**

- *A permanent type of antifreeze is installed in the cooling system when shipped. It is colored green and contains ethylene glycol. It is mixed at 50% and has the freezing point of  $-35^{\circ}\text{C}$  ( $-31^{\circ}\text{F}$ ).*

*Coolant Level Inspection*

- Position the motorcycle so that it is perpendicular to the ground.

- Check the coolant level through the coolant level gauge on the reserve tank located to the left of the engine. The coolant level should be between the F (Full) and L (Low) level lines.

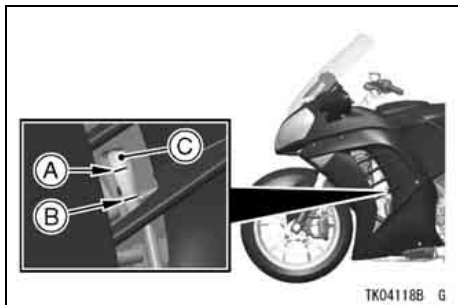

- A. F (Full) Level Line
- B. L (Low) Level Line
- C. Reserve Tank

## 200 MAINTENANCE AND ADJUSTMENT

### NOTE


○ *Check the level when the engine is cold (room or atmospheric temperature).*

- If the amount of coolant is insufficient, add coolant into the reserve tank.

### *Coolant Filling*

- Remove the rear middle fairing (see Air Cleaner section).

- Remove the cap from the reserve tank and add coolant through the filler opening to the F (Full) level line.

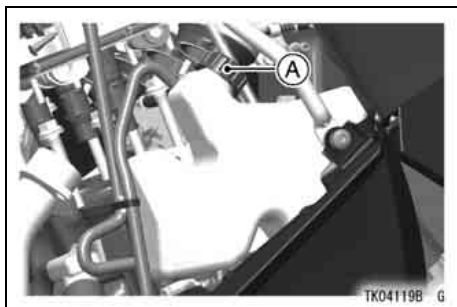

A. Reserve Tank Cap

### NOTE

- *In an emergency you can add water alone to the coolant reserve tank, however it must be returned to the correct mixture ratio by the addition*

*of antifreeze concentrate as soon as possible.*

## NOTICE

**If coolant must be added often, or the reserve tank completely runs dry, there is probably leakage in the system. Have the cooling system inspected by your authorized Kawasaki dealer.**

- Install the reserve tank cap.
- Install the removed parts.

### *Coolant Change*

Have the coolant changed by an authorized Kawasaki dealer.


## Spark Plugs

The standard spark plug is shown in the table. The spark plugs should be replaced in accordance with the Periodic Maintenance Chart.

Spark plug removal should be done only by a competent mechanic following the instructions in the Service Manual.

### Spark Plug

Standard Plug	NGK CR9EIA-9
Plug Gap	0.8 ~ 0.9 mm (0.031 ~ 0.035 in.)
Tightening Torque	13 N·m (1.3 kgf·m, 115 in·lb)

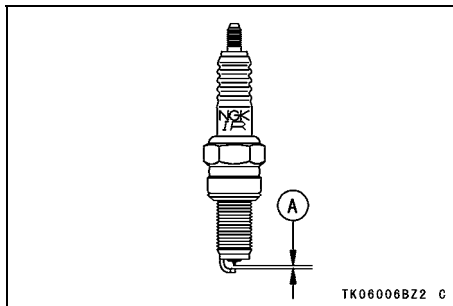

A. 0.8 ~ 0.9 mm (0.031 ~ 0.035 in.)


## Evaporative Emission Control System (California model only)

This system routes fuel vapors from the fuel system into the running engine or stores the vapors in a canister when the engine is stopped. Although no adjustments are required, a thorough visual inspection must be made at the intervals specified by the Periodic Maintenance Chart.

### *Inspection*

- Check that the hoses are securely connected.
- Replace any kinked, deteriorated, or damaged hoses.



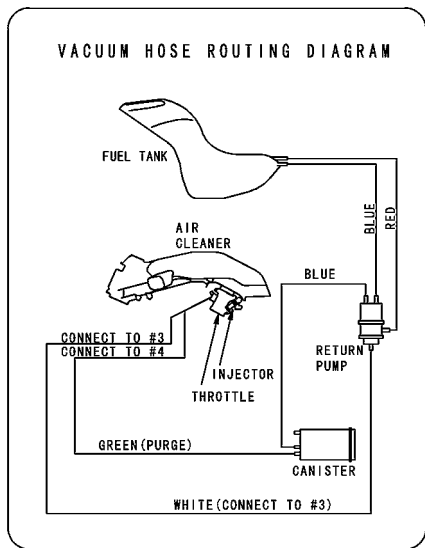

TE03466BN7 C

## Valve Clearance

Valve and valve seat wear decreases valve clearance, upsetting valve timing.

### NOTICE

If valve clearance is left unadjusted, wear will eventually cause the valves to remain partly open; which lowers performance, burns the valves and valve seats, and may cause serious engine damage.

Valve clearance for each valve should be checked and adjusted in accordance with the Periodic Maintenance Chart.

Inspection and adjustment should be carried out only by a competent mechanic following the instructions in the Service Manual.

### **Kawasaki Clean Air System**

The Kawasaki Clean Air System (KCA) is a secondary air suction system that helps the exhaust gases to burn more completely. When the spent fuel charge is released into the exhaust system, it is still hot enough to burn. The KCA System allows extra air into the exhaust system so that the spent fuel charge can continue to burn. This continued burning action tends to burn up a great deal of the normally unburned gases, as well as changing a significant portion of the carbon monoxide into carbon dioxide.

### **Air Suction Valves -**

The air suction valve is essentially a check valve which allows fresh air to flow only from the air cleaner into the exhaust port. Any air that has passed

the air suction valve is prevented from returning. Inspect the air suction valves in accordance with the Periodic Maintenance Chart. Also, inspect the air suction valves whenever stable idling cannot be obtained, engine power is greatly reduced, or there are abnormal engine noises.

Air suction valve removal and inspection should be carried out only by a competent mechanic following the instructions in the Service Manual.

## Air Cleaner

A clogged air cleaner restricts the engine's air intake, increasing fuel consumption, reducing engine power, and causing spark plug fouling.

This motorcycle's air cleaner element consists of a wet paper filter, which cannot be cleaned.

The air cleaner element must be replaced in accordance with the Periodic Maintenance Chart. In dusty, rainy, or muddy conditions, the air cleaner element should be serviced more frequently than the recommended interval.


## **NOTICE**

**Use only the recommended air cleaner element (Kawasaki part number 11013-0014 or equivalent type). Using the any other air cleaner element will wear the engine prematurely or lower the engine performance.**

## 206 MAINTENANCE AND ADJUSTMENT


### *Air Cleaner Element Removal*

- Remove the fuel tank front cover by removing the bolts.

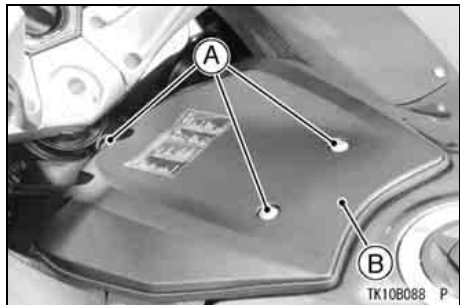


- A. Bolts**
- B. Fuel Tank Front Cover**

- Open the storage case lid.
- Remove the inner cover by removing the bolts and quick rivet.

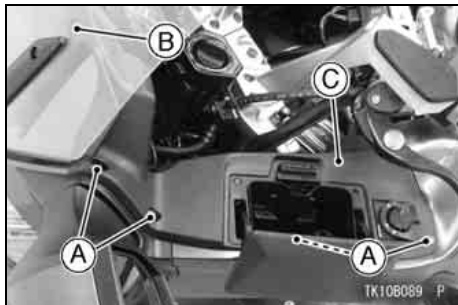


- A. Bolts**
- B. Quick Rivet**
- C. Inner Cover**

- Remove the bolts and quick rivets.
- Pull the rear part of the rear middle fairing slowly to detach the projection, and then pull the rear middle fairing backward to detach the tabs.

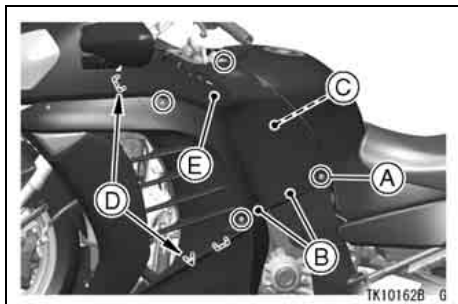

- A. Bolts
- B. Quick Rivets
- C. Projection
- D. Tabs
- E. Rear Middle Fairing


- Remove the bracket by removing the bolts.

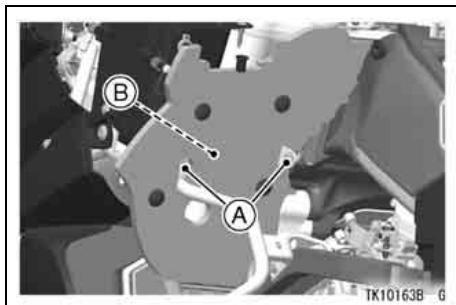

- A. Bolts
- B. Bracket

## 208 MAINTENANCE AND ADJUSTMENT


- Remove the air cleaner element cover by removing the bolts.

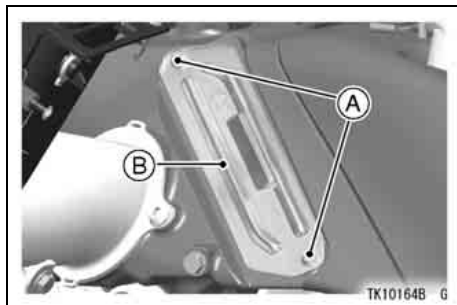

A. Bolts

B. Air Cleaner Element Cover

- Pull out the air cleaner element.

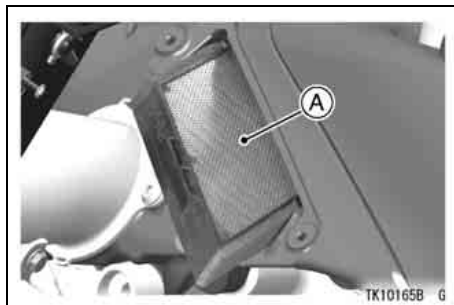

A. Air Cleaner Element

### **⚠ WARNING**

If dirt or dust is allowed to pass through into the fuel injection system, the throttle may stick or become inoperable resulting in a hazardous operating condition.


**NOTICE**

**If dirt gets through into the engine, excessive engine wear and possibly engine damage will occur.**

*Air Cleaner Element Installation*

Element and the removed parts installation is performed in the reverse order of removal, and make sure that the lead does not pinch with any parts.

- Install the air cleaner element cover so that arrow mark faces upward.

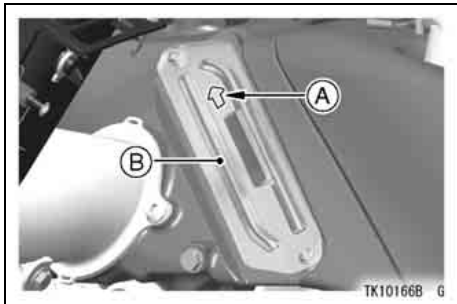


**A. Arrow Mark**

**B. Air Cleaner Element Cover**

- Insert the tabs on the lower part of the rear middle fairing, and then insert the tab on the upper part of the rear middle fairing, and attach the projection. Make sure the front end of the rear middle fairing is inserted into the hook of the front middle fairing.

## 210 MAINTENANCE AND ADJUSTMENT

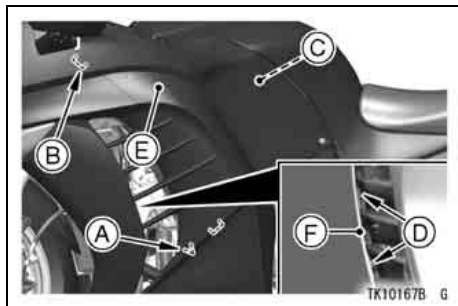

- A. Tabs (Lower Part)
- B. Tab (Upper Part)
- C. Projection
- D. Hook
- E. Rear Middle Fairing
- F. Front Middle Fairing


- Be sure the storage case lid lock is locked correctly after installing the inner cover.

### NOTE

- *The inner cover and the rear middle fairing use the quick rivets. The quick*

*rivets can be removed by pushing the central pin into the quick rivets, and when installing them, pull the central pin fully up first, and then push into the central pin after inserting them.*


### Quick Rivet Removal

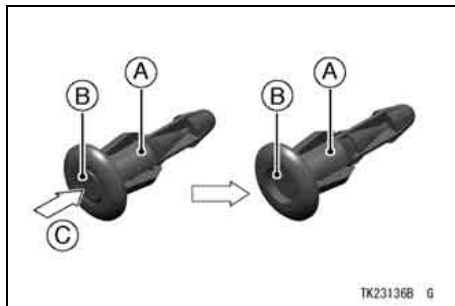

- A. Quick Rivet
- B. Central Pin
- C. Push in.




## Quick Rivet Installation

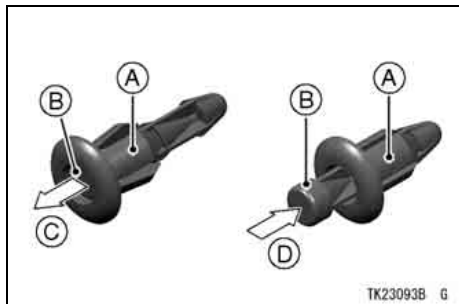

- A. Quick Rivet
- B. Central Pin
- C. Pull up fully.
- D. Push in.

### Oil Draining

- Inspect the transparent reservoir located under the left side of the engine to see if any oil has run down by removing the rear middle firing (see Air Cleaner Element Removal).

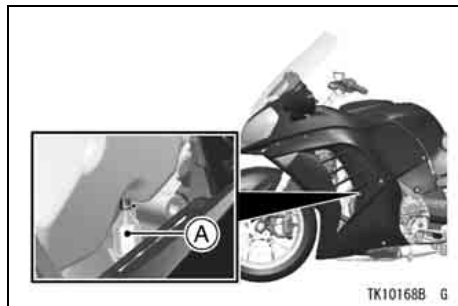

### A. Reservoir

- If there is any oil in the reservoir, remove the reservoir and drain the oil.

## **⚠ WARNING**

**Oil on tires will make them slippery and can cause an accident and injury. Be sure to install the reservoir in the drain hose after draining.**

## Throttle Control System


Check the throttle grip play each day before riding the motorcycle, and in accordance with the Periodic Maintenance Chart. Adjust it if necessary.

### Throttle Grip -

The throttle grip controls the butterfly valves in the throttle body. If the throttle grip has excessive play due to either cable stretch or maladjustment, it will cause a delay in throttle response, especially at low engine speed. Also, the throttle valve may not open fully at full throttle. On the other hand, if the throttle grip has not play, the throttle will be hard to control, and the idle speed will be erratic.

#### *Inspection*

- Check that the throttle grip play is correct by lightly turning the throttle grip back and forth.

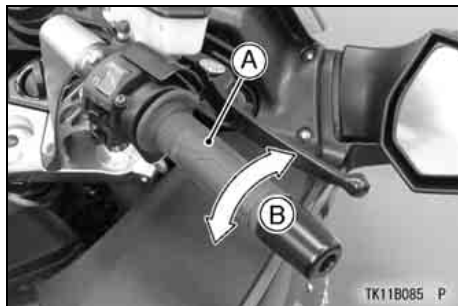

A. Throttle Grip

B. Throttle Grip Play

### Throttle Grip Play

2 ~ 3 mm (0.08 ~ 0.12 in.)


- If there is improper play, adjust it.

#### *Adjustment*

- Loosen the locknuts at the lower ends of the throttle cables, and screw

both throttle cable adjusters in completely so as to give the throttle grip plenty of play.

- Turn out the decelerator cable adjuster until there is no play when the throttle grip is completely closed. Tighten the locknut against the adjuster.

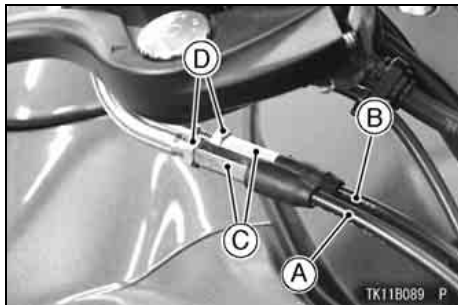

- A. Decelerator Cable**
- B. Accelerator Cable**
- C. Adjusters**
- D. Locknuts**

- Turn out the accelerator cable adjuster until 2 ~ 3 mm (0.08 ~ 0.12 in.) of throttle grip play is obtained. Tighten the locknut against the adjuster.
- If the throttle cables cannot be adjusted with the adjuster at the upper of the throttle cable, further adjustment of the throttle cables should be done by a competent mechanic following the instructions in the Service Manual.
- With the engine idling, turn the handlebar to each side. If handlebar movement changes the idle speed, the throttle cables may be improperly adjusted or in correctly routed, or they may be damaged. Be sure to correct any of these conditions before idling.

 **WARNING**

Operation with improperly adjusted, incorrectly routed or damaged cables could result in an unsafe riding condition. Follow the service manual to make sure to correct any of these conditions.

**Engine Vacuum Synchronization**

Engine vacuum synchronization must be checked and adjusted periodically in accordance with the Periodic Maintenance Chart by a competent mechanic following the instructions in the Service Manual.

**NOTE**

- *Poor engine vacuum synchronization will cause unstable idling, sluggish throttle response, and reduce engine power and performance.*

## Idle Speed


The idle speed adjustment should be performed in accordance with the Periodic Maintenance Chart or whenever the idle speed is disturbed.

### *Adjustment*

- Start the engine, and warm it up thoroughly.
- Adjust the idle speed by turning the idle adjusting screw.

### Idle Speed

1 050 ~ 1 150 r/min (rpm)
---------------------------

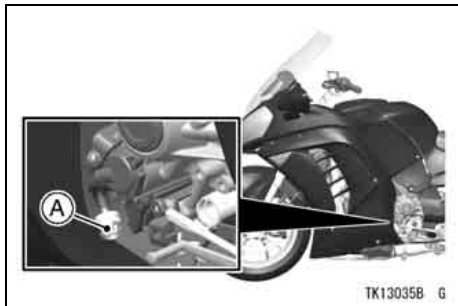

#### A. Idle Adjusting Screw

- Open and close the throttle a few times to make sure that the idle speed does not change. Readjust if necessary.
- With the engine idling, turn the handlebar to each side. If handlebar movement changes the idle speed, the throttle cables may be improperly adjusted or incorrectly routed, or they may be damaged. Be sure to correct any of these conditions before riding.

 **WARNING**

**Operation with damaged cables could result in an unsafe riding condition. Replace damaged control cables before operation.**

## **Clutch**

The motorcycle is equipped with a hydraulically operated clutch that requires no adjustment except fluid level and clutch operation inspection each day before riding the motorcycle in accordance with the Periodic Maintenance Chart.

### *Clutch Operation Inspect*


- If the clutch lever play becomes excessive and the motorcycle creeps or stalls when shifted into gear, there is probably air in the clutch system and it must be bled out by an authorized Kawasaki dealer.

**NOTE**

- *Use the same fluid as is used in the brakes and keep the same requirements mentioned in the Brakes section.*

**Fluid Level Inspection**

- With the clutch fluid reservoir held horizontal, the clutch fluid level must be kept between the upper and lower level lines.
- If the fluid level is lower than the lower level line, check for fluid leaks in the clutch line, and fill the clutch fluid reservoir to the upper level line.

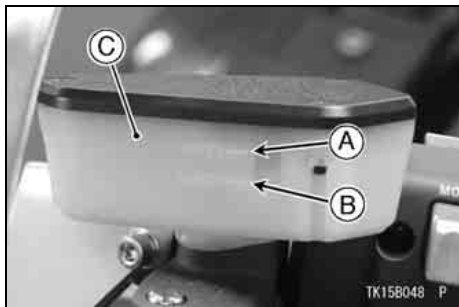


- A. Upper Level Line**
- B. Lower Level Line**
- C. Clutch Fluid Reservoir**

## Brakes

### *Brake Wear Inspection*

Inspect the brakes for wear. For each front and rear disc brake caliper, if the thickness of either pad lining is less than 1 mm (0.04 in.), replace both pads in the caliper as a set. Pad replacement should be done by an authorized Kawasaki dealer.

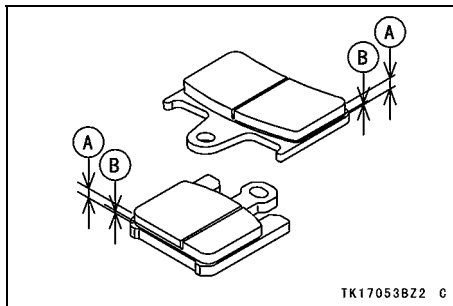

- A. Lining Thickness  
B. 1 mm (0.04 in.)

### **Disc Brake Fluid -**

In accordance with the Periodic Maintenance Chart, inspect the brake fluid level in both the front and rear brake fluid reservoirs and change the brake fluid. The brake fluid should also be changed if it becomes contaminated with dirt or water.

### *Fluid Requirement*

Use DOT4 rated heavy-duty brake fluid only.

## **NOTICE**

**Do not spill brake fluid onto any painted surface.**

**Do not use fluid from a container that has been left open or that has been unsealed for a long time.**


**Check for fluid leakage around the fittings.**

**Check brake hose for damage.**




*Fluid Level Inspection*

- With the brake fluid reservoirs held horizontal, the brake fluid level must be kept between the upper and lower level lines.

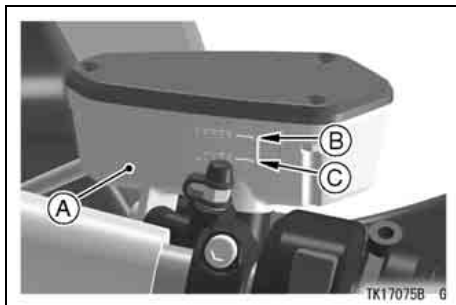

**A. Front Brake Fluid Reservoir**  
**B. Upper Level Line**  
**C. Lower Level Line**

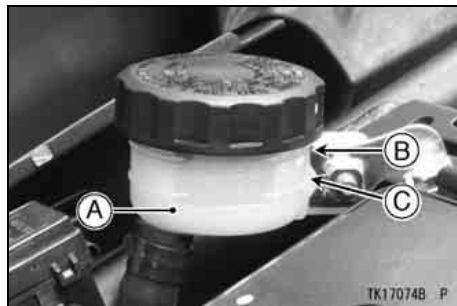

**A. Rear Brake Fluid Reservoir**  
**B. Upper Level Line**  
**C. Lower Level Line**


- If the fluid level in either reservoir is lower than the lower level line, check for fluid leaks in the brake lines, and fill the reservoir to the upper level line.

## **⚠ WARNING**

Mixing brands and types of brake fluid can reduce the brake system's effectiveness and cause an accident resulting in injury or death. Do not mix two brands of brake fluid. Change the brake fluid in the brake line completely if the brake fluid must be refilled but the type and brand of the brake fluid that is already in the reservoir are unidentified.

## **NOTE**

- *First, tighten until slight resistance is felt indicating that the cap is seated on the reservoir body; tighten the cap an additional 1/6 turn while holding the brake fluid reservoir body.*

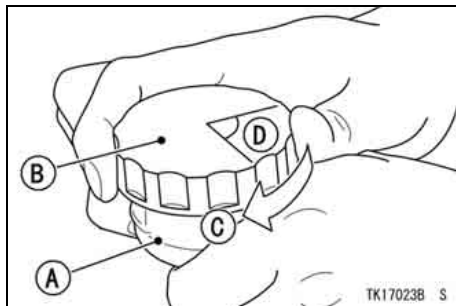

- A. Reservoir
- B. Cap
- C. Clockwise
- D. 1/6 turn

## *Fluid Change*

Have the brake fluid changed by an authorized Kawasaki dealer.

## **Front and Rear Brakes -**

Disc and disc pad wear is automatically compensated for and has no effect on the brake lever or pedal action.

So there are no parts that require adjustment on the front or rear brakes.

 **WARNING**

**Air in the brake lines diminish braking performance and can cause an accident resulting in injury or death. If the brake lever or pedal feels mushy when it is applied, there might be air in the brake lines or the brake may be defective. Have the brake checked immediately by an authorized Kawasaki dealer.**

## **Brake Light Switches**


When either the front or rear brake is applied, the brake light goes on. The front brake light switch requires no adjustment, but the rear brake light switch should be adjusted in accordance with the Periodic Maintenance Chart.

### *Inspection*

- Turn the key knob to ON.
- The brake light should go on when the front brake is applied.
- If it does not, ask your authorized Kawasaki dealer to inspect the front brake light switch.

## 222 MAINTENANCE AND ADJUSTMENT

- Check the operation of the rear brake light switch by depressing the brake pedal. The brake light should go on after the proper pedal travel.

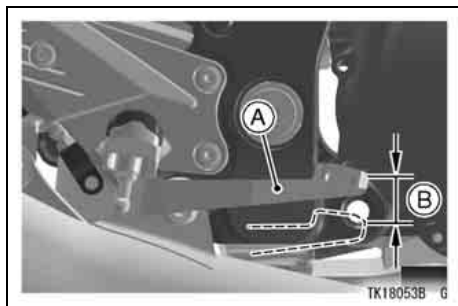

- A. Brake Pedal**  
**B. 10 mm (0.39 in.)**


- If the light does not go on, adjust the rear brake light switch.

### Brake Pedal Travel

10 mm (0.39 in.)

### Adjustment

- To adjust the rear brake light switch, move the switch up or down by turning the adjusting nut.

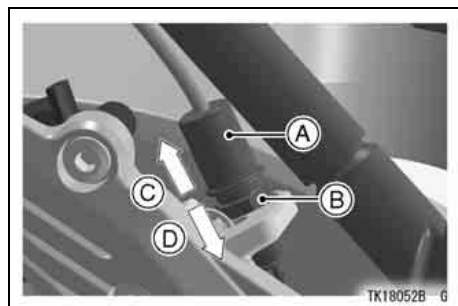

- A. Rear Brake Light Switch**  
**B. Adjusting Nut**  
**C. Lights sooner**  
**D. Lights later**

**NOTICE**

**To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.**

**Front Fork**


The front fork operation and oil leakage should be checked in accordance with the Periodic Maintenance Chart.

*Front Fork Inspection*

- Holding the brake lever, pump the front fork up and down several times to inspect smooth stroke.
- Visually inspect the front fork for oil leakage, scoring or scratches on the outer surface of the inner tube.

## 224 MAINTENANCE AND ADJUSTMENT


- If any doubt about the front fork, it should be done by an authorized Kawasaki dealer.

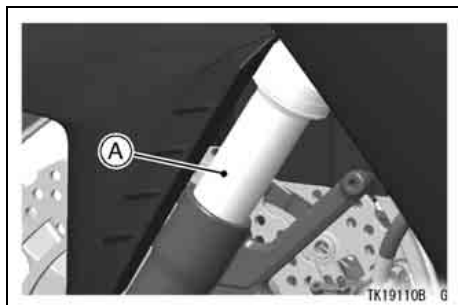

**A. Inner Tube**

On top of each front fork leg are a spring preload adjuster and a rebound damping force adjuster, so that the spring force and damping force can be

adjusted for different riding and loading conditions. Weaker spring force and damping force are for comfortable riding, but they should be increased for high speed riding or riding on rough roads.

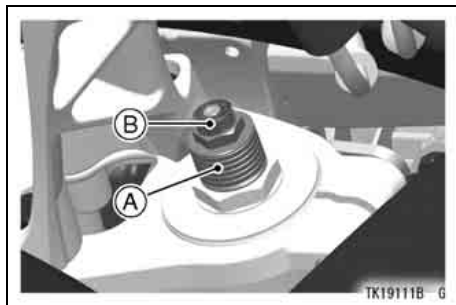

**A. Spring Preload Adjuster**


**B. Rebound Damping Force Adjuster**

**NOTICE**

Do not force to turn the rebound damping force adjuster from the fully seated position, at the adjusting mechanism may be damaged.

*Spring Preload Adjustment*

- Turn the spring preload adjusters into the nut to increase spring force and out to decrease spring force using the wrench. The adjusting range is measured from the top of each adjuster. Be sure to turn both adjusters to the same position.

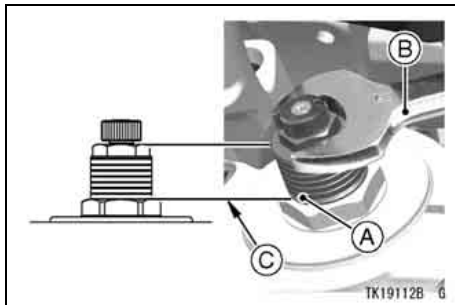

- A. Spring Preload Adjuster
- B. Wrench
- C. Adjustable Range

**Adjusting Range**

4 ~ 19 mm (0.16 ~ 0.75 in.)

*Rebound Damping Force Adjustment*

- Turn the rebound damping force adjuster clockwise. This makes the damping force greatest.

## 226 MAINTENANCE AND ADJUSTMENT

- Turn the adjuster counterclockwise to decrease damping force. Be sure to turn both adjusters by the same number of turns.

### **WARNING**

**If both spring preload adjusters and both rebound and compression damping force adjusters are not adjusted equally, handling may be impaired and hazardous condition may result. Always adjust the suspension components equally.**

The standard setting positions of the spring preload adjuster, and rebound damping force adjuster for an average -build rider of 68 kg (150 lb) with no

passenger and no accessories are as follows:

Spring Preload Adjuster	14 mm (0.55 in.) from top of adjuster
Rebound Damping Force Adjuster	5 clicks*

\*: counterclockwise from the fully seated position (strongest position)




## Rear Shock Absorber

The rear shock absorber operation and oil leakage should be checked in accordance with the Periodic Maintenance Chart.

### *Rear Shock Absorber Inspection*

- Press down on the seat several times to inspect the stroke.
- Visually inspect the rear shock absorber for oil leakage.

- If any doubt about the rear shock absorber, it should be done by an authorized Kawasaki dealer.

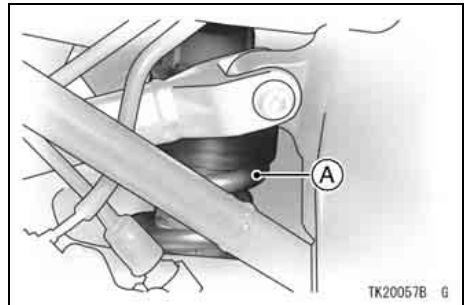

**A. Rear Shock Absorber**

The rear shock absorber can be adjusted by changing the spring preload and rebound damping force for various riding and loading conditions.


Before making any adjustments, however, read the following procedures:

## NOTICE

Do not force to turn the rebound damping force adjuster from the fully seated position or the adjusting mechanism may be damaged.

### *Spring Preload Adjustment*


- Turn the adjuster in or out to the desired position.
- Turning the adjuster clockwise increases the spring preload, and turning it counterclockwise decreases the spring preload.

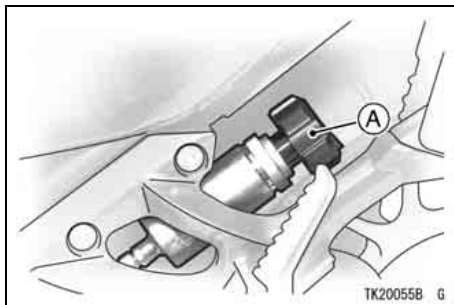

A. Adjuster

### Rebound Damping Force Adjustment

The rebound damping force adjuster is located at the lower end of the rear shock absorber.

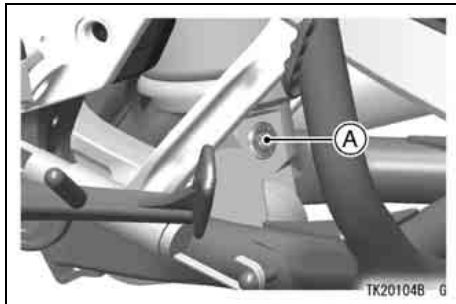

#### A. Rebound Damping Force Adjuster

- Turn the rebound damping force adjuster all the way clockwise with a screwdriver to make the damping force greatest.

- Turn the adjuster counterclockwise to decrease damping force.

The standard setting position of the spring preload adjuster and rebound damping force adjuster for an average -build rider of 68 kg (150 lb) with no passenger and no accessories is as follows:


Spring Preload Adjuster	13 clicks*
Rebound Damping Force Adjuster	1 1/4 turns out**

\*: counterclockwise from the fully seated position (weakest position)


\*\* : clockwise from the fully seated position (strongest position)

### Wheels

Tubeless tires are installed on the wheels of this motorcycle. The indications of TUBELESS on the tire side wall and the rim show that the tire and rim are specially designed for tubeless use.

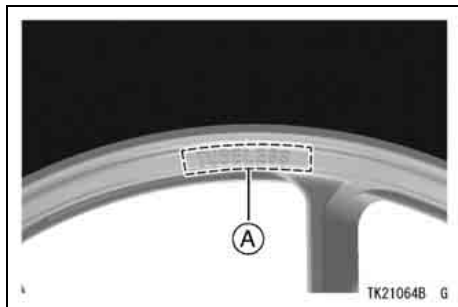

**A. TUBELESS Mark**

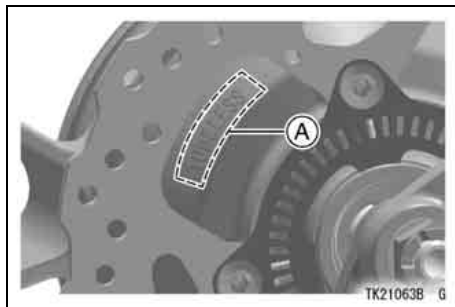

**A. TUBELESS Mark**

The tire and rim form a leakproof unit by making airtight contacts at the tire chamfers and the rim flanges instead of using an inner tube.

 **WARNING**

**Installing a tube inside a tubeless-type tire can create excessive heat build up that can damage the tube and cause rapid deflation. The tires, rims, and air valves on this motorcycle are designed only for tubeless type wheels. The recommended standard tires, rims, and air valves must be used for replacement. Do not install tube-type tires on tubeless rims. The beads may not seat properly on the rim causing tire deflation. Do not install a tube inside a tubeless tire. Excessive heat build-up may damage the tube causing tire deflation.**

*Tire Sealants*

Internal tire sealants or repair products can cause damage to the tire pressure sensor(s) and should not be used.


**Tires -***Payload and Tire Pressure*

Failure to maintain proper inflation pressures or observe payload limits for your tires may adversely affect handling and performance of your motorcycle and can result in loss of control. The maximum recommended load in addition to vehicle weight is 228 kg (503 lb), including rider, passenger, baggage, and accessories.

- Remove the air valve cap.
- Check the tire pressure often, using an accurate gauge.
- Make sure to install the air valve cap securely.

**NOTE**

- *Measure the tire pressure when the tires are cold (that is, when the motorcycle has not been ridden more than a mile during the past 3 hours).*
- *Tire pressure is affected by changes in ambient temperature and altitude, and so the tire pressure should be checked and adjusted when your riding involves wide variations in temperature or altitude.*

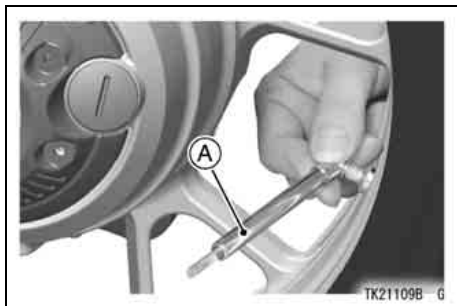**A. Tire Pressure Gauge****Tire Air Pressure (when cold)**

Front	290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)
Rear	290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)

***Tire Wear, Damage***

As the tire tread wears down, the tire becomes more susceptible to puncture and failure. An accepted estimate is that 90% of all tire failures occur during the last 10% of tread life (90% worn).

So it is false economy and unsafe to use the tires until they are bald.

- In accordance with the Periodic Maintenance Chart, measure the depth of the tread with a depth gauge, and replace any tire that has worn down to the minimum allowable tread depth.



A. Tire Depth Gauge

### Minimum Tread Depth

Front	–	1 mm (0.04 in.)
Rear	Under 130 km/h (80 mph)	2 mm (0.08 in.)
	Over 130 km/h (80 mph)	3 mm (0.12 in.)

- Visually inspect the tire for cracks and cuts, replacing the tire in case of bad damage. Swelling or high spots indicate internal damage, requiring tire replacement.
- Remove any imbedded stones or other foreign particles from the tread.

### NOTE

- *Have the wheel balance inspected whenever a new tire is installed.*

 **WARNING**

Tires that have been punctured and repaired do not have the same capabilities as undamaged tires and can suddenly fail, causing an accident resulting in serious injury or death. Replace damaged tires as soon as possible. To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure. If it is necessary to ride on a repaired tire, do not exceed 100 km/h (60 mph) until the tire is replaced.

**NOTE**

- *When operating on public roadways, keep maximum speed under traffic law limits.*

**Standard Tire (Tubeless)**

Front	Make, Type: BRIDGESTONE, BATTLAX BT021F U  Size: 120/70 ZR17 M/C (58W)
	Make, Type: BRIDGESTONE, BATTLAX BT021F M  Size: 120/70 ZR17 M/C (58W)
Rear	Make, Type: BRIDGESTONE, BATTLAX BT021R U  Size: 190/50 ZR17 M/C (73W)



 **WARNING**

**Mixing tire brands and types can adversely affect handling and cause an accident resulting in injury or death. Always use the same manufacturer's tires on both front and rear wheels.**

 **WARNING**

**New tires are slippery and may cause loss of control and injury. A break-in period of 160 km (100 miles) is necessary to establish normal tire traction. During break-in, avoid sudden and maximum braking and acceleration, and hard cornering.**

**Battery**

The battery installed in this motorcycle is a sealed type, so it is not necessary to check the battery electrolyte level or add distilled water.

The sealing strip should not be pulled off once the specified electrolyte has been installed in the battery for initial service.

However, in order to maximize battery life and ensure that it will provide the power needed to start the motorcycle you must properly maintain the battery's charge. When used regularly, the charging system in the motorcycle helps keep the battery fully charged. If your motorcycle is only used occasionally or for short periods of time, the battery is more likely to discharge.

Due to their internal composition, batteries continually self discharge. The discharge rate depends on the

## 236 MAINTENANCE AND ADJUSTMENT

type of battery and ambient temperature. As temperatures rise, so does the discharge rate. Every 15°C (27°F) doubles the rate.

Electrical accessories, such as digital clocks and computer memory, also draw current from the battery even when the key is switched off. Combine such “key-off” draws with hot temperature, and a battery can go from fully charged to completely discharged in a matter of days.

Self-discharge		
Temperature	Approx. number of days from 100% charged to 100% discharged	
	Lead -Antimony	Lead -Calcium
	Battery	Battery
40°C (104°F)	100 Days	300 Days
25°C (77°F)	200 Days	600 Days
0°C (32°F)	550 Days	950 Days

Current Drain		
Discharging Ampere	Days from 100% charged to 50% discharged	Days from 100% charged to 100% discharged
7 mA	60 Days	119 Days
10 mA	42 Days	83 Days
15 mA	28 Days	56 Days
20 mA	21 Days	42 Days
30 mA	14 Days	28 Days

In extremely cold weather the fluid in an inadequately charged battery can easily freeze, which can crack the case and buckle the plates. A fully charged battery can withstand sub-freezing temperatures with no damage.

### **Battery Sulfation -**

A common cause of battery failure is sulfation.

Sulfation occurs when the battery is left in a discharged condition for an extended time. Sulfate is a normal by product of the chemical reactions within a battery. But when continuous discharge allows the sulfate to crystallize in the cells, the battery plates become permanently damaged and will not hold a charge. Battery failure due to sulfation is not warrantable.

### **Battery Maintenance -**

It is the owner's responsibility to keep the battery fully charged. Failure to do so can lead to battery failure and leave you stranded.

If you are riding your vehicle infrequently, inspect the battery voltage weekly using a voltmeter. If it drops below 12.6 volts, the battery should be charged using an appropriate charger (check with your Kawasaki dealer).

## 238 MAINTENANCE AND ADJUSTMENT

If you will not be using the motorcycle for longer than two weeks, the battery should be charged using an appropriate charger. Do not use an automotive-type quick charger that may overcharge the battery and damage it.

### **Kawasaki-recommended chargers are:**

Battery Mate 150-9

OptiMate PRO 4-S/PRO S/PRO 2

Yuasa MB-2040/2060

Christie C10122S

If the above chargers are not available, use equivalent one.

For more details, ask your Kawasaki dealer.

### **Battery Charging -**

- Remove the battery from the motorcycle (see Battery Removal).

- Attach the leads from the charger and charge the battery at a rate (amperage × hours) that is indicated on the battery. If it is not possible to read the rate, charge the battery at an amperage that is about 1/10th of the battery capacity.
- The charger will keep the battery fully charged until you are ready to re-install the battery in the motorcycle (see Battery Installation).

### ***NOTICE***

**Never remove the sealing strip, or the battery can be damaged. Do not install a conventional battery in this motorcycle, or the electrical system cannot work properly.**

**NOTE**


○ If you charge the sealed battery, never fail to observe the instructions shown in the label on the battery.

**⚠ WARNING**

Lead is a toxic substance. Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

**Battery Removal**


- Remove the bolt.
- Remove the sub side cover by pulling out it to detach the projecton.

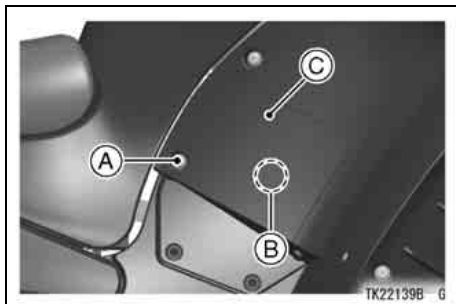

- A. Bolt
- B. Projection
- C. Sub Side Cover


## 240 MAINTENANCE AND ADJUSTMENT

- Remove the battery cover by removing the bolts.

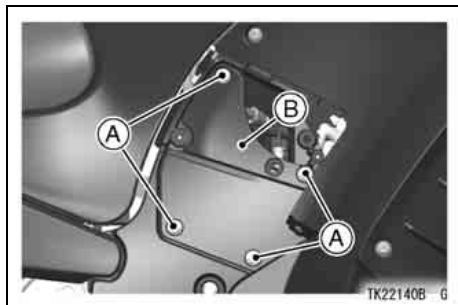

**A. Bolts**  
**B. Battery Cover**

- Remove the battery (-) cable and frame ground cable by removing the bolt.
- Pull the battery holder a little, and remove the battery (+) cable from the battery.
- Pull out the battery holder.

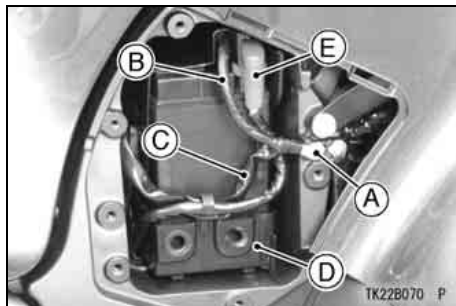


**A. Bolt**  
**B. Battery (-) Cable**  
**C. Frame Ground Cable**  
**D. Battery Holder**  
**E. Battery (+) Cable**

**NOTICE**

**Be careful not to drop the battery from the motorcycle when pulling out it.**

**Do not give the battery tray a strong pull, or the cables may be damaged.**

- Detach the hook, and separate the cover and holder.
- Remove the battery (-) cable from the battery.

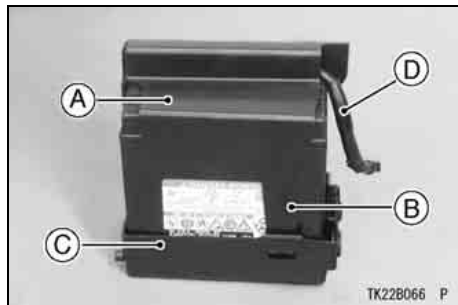

- A. Cover
- B. Hook
- C. Battery Holder
- D. Battery (-) Cable


- Clean the battery using a solution of baking soda and water. Be sure that the wire connections are clean.

## 242 MAINTENANCE AND ADJUSTMENT

### *Battery Installation*


Battery and the removed parts installation is performed in the reverse order of removal, and make sure that the lead or cable does not pinch with any parts.

- Insert the projections on the battery holder into the holes of the battery holder compartment.

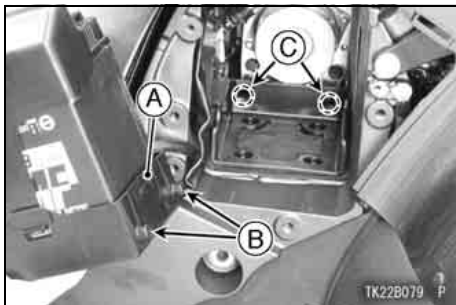

- A. Battery Holder**
- B. Projections**
- C. Holes**

- First, install the battery (+) cable from the battery, and then install the battery (-) cable from the frame.

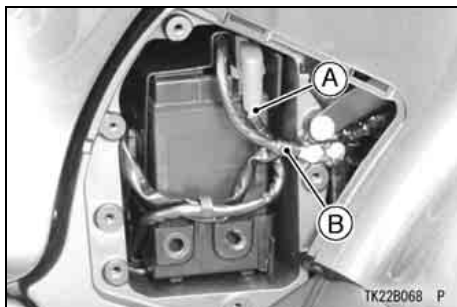


- A. Battery (+) Cable**
- B. Battery (-) Cable**



**NOTICE**

Installing the (-) cable to the (+) terminal of the battery or the (+) cable to the (-) terminal of the battery can cause seriously damage to the electrical system.


- Insert the projections on the battery cover into the holes of the battery holder.

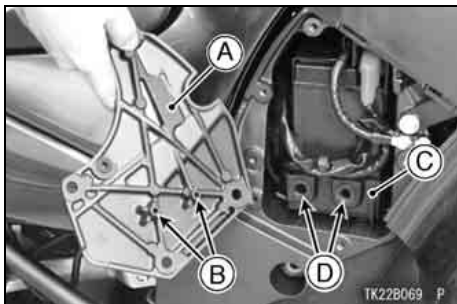

- A. Battery Cover
- B. Projections
- C. Battery Holder
- D. Holes

## 244 MAINTENANCE AND ADJUSTMENT

- Insert the tabs on the sub side cover into the under of the rear middle fairing, and insert the projection on the sub side cover into the hole on the battery cover.

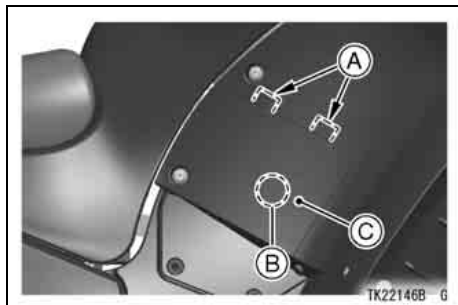

- A. Tabs
- B. Projections
- C. Sub Side Cover

## Headlight Beam

### *Horizontal Adjustment*


The headlight beam is adjustable horizontally. If not properly adjusted horizontally, the beam will point to one side rather than straight ahead.

- Turn the horizontal adjuster in or out until the beam points straight ahead.

### *Vertical Adjustment*

The headlight beam is adjustable vertically. If adjusted too low, neither low nor high beam will illuminate the road far enough ahead. If adjusted too high, the high beam will fail to illuminate the road close ahead, and the low beam will blind oncoming drivers.

- Turn the vertical adjuster in or out to adjust the headlight vertically.

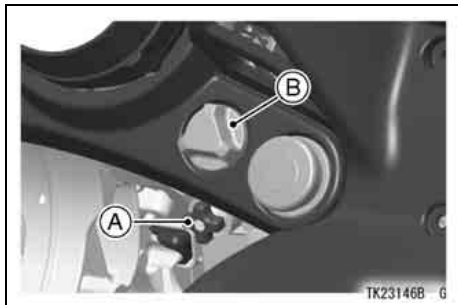

- A. Horizontal Adjuster  
B. Vertical Adjuster (Adjuster Knob)


### NOTE

- *On high beam, the brightest point should be slightly below horizontal.*

*The proper angle is 0.4 degrees below horizontal. This is a 50 mm (2.0 in.) drop at 7.6 m (25 ft) measured from the center of the headlight, with the motorcycle on its wheels and the rider seated.*

### NOTICE


**When handling the quartz-halogen bulbs, never touch the glass portion with bare hands. Always use a clean cloth. Oil contamination from hands or dirty rags can reduce bulb life or cause the bulb to explode.**

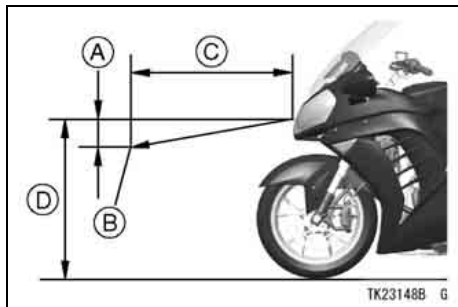

- A. 50 mm (2.0 in.)
- B. Center of Brightest Spot
- C. 7.6 m (25 ft)
- D. Height of Headlight Center

### Fuses

Fuses are arranged in the fuse boxes located under the seat. The main fuse is located at the battery compartment. If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.

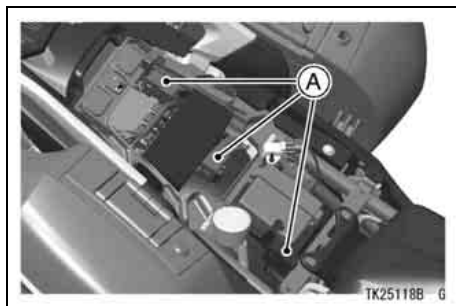


A. Fuse Boxes



A. Main Fuse

**⚠ WARNING**

Substituting fuses can cause wiring to overheat, catch fire and/or fail. Do not use any substitute for the standard fuse. Replace the blown fuse with a new one of the correct capacity, as specified on the fuse boxes and main fuse.

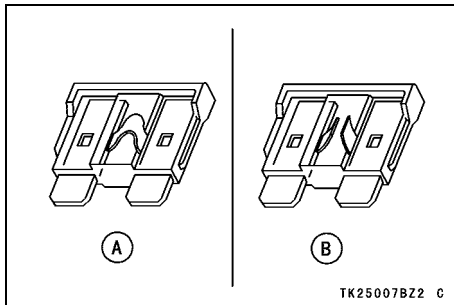

A. Normal  
B. Failed

## General Lubrication

Lubricate the points shown below, with either motor oil or regular grease, in accordance with the Periodic Maintenance Chart or whenever the vehicle has been operated under wet or rainy conditions.

Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.

### NOTE

- *A few drops of oil are effective to keep bolts and nuts from rusting and sticking. This makes removal easier. Badly rusted nuts, bolts, etc., should be replaced with new ones.*


**Apply motor oil to the following pivots -**

- Side Stand

- Center Stand
- Clutch Lever
- Front Brake Lever
- Rear Brake Pedal

**Lubricate the following cables with a pressure cable lubber -**

- **(K)** Throttle Inner Cables

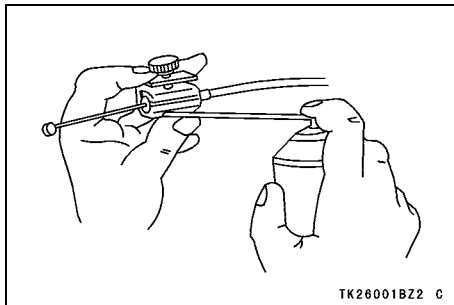

TK26001BZ2 C

## Apply grease to the following points -

- **(K)** Throttle Inner Cable Upper Ends

**(K):** Should be serviced by an authorized Kawasaki dealer.

### **NOTE**

- *After connecting the cables, adjust them.*

## Cleaning Your Motorcycle

### *General Precautions*

Frequent and proper care of your Kawasaki motorcycle will enhance its appearance, optimize overall performance, and extend its useful life. Covering your motorcycle with a high quality, breathable motorcycle cover will help protect its finish from harmful UV rays, pollutants, and reduce the amount of dust reaching its surfaces.

 **WARNING**


**Build-up of debris or flammable material in and around the vehicle chassis, engine, and exhaust can cause mechanical problems and increase the risk of fire.**

**When operating the vehicle in conditions that allow debris or flammable material to collect in and around the vehicle, inspect the engine, electrical component and exhaust areas frequently. If debris or flammable materials have collected, park the vehicle outside and stop the engine. Allow the engine to cool, then remove any collected debris. Do not park or store the vehicle in an enclosed space prior to inspecting for build-up of debris or flammable materials.**

- Be sure the engine and exhaust are cool before washing.
- Avoid applying degreaser to seals, brake pads, and tires.
- Avoid all harsh chemicals, solvents, detergents, and household cleaning products such as ammonia-based window cleaners.
- Gasoline, brake fluid, clutch fluid, and coolant will damage the finish of painted and plastic surfaces: wash them off immediately.
- Avoid wire brushes, steel wool, and all other abrasive pads or brushes.
- Use care when washing the windshield, headlight cover, and other plastic parts as they can easily be scratched.
- Avoid using pressure washers; water can penetrate seals and electrical components and damage your motorcycle.




- Avoid spraying water in delicate areas such as in air intakes, fuel system, brake components, electrical components, electrical socket, muffler outlets, and fuel tank openings.
- After cleaning your motorcycle, check the rubber boot covering the shift pedal ball joint for correct installation. Be sure the sealing lip of the rubber boot fits into the groove of the ball joint.

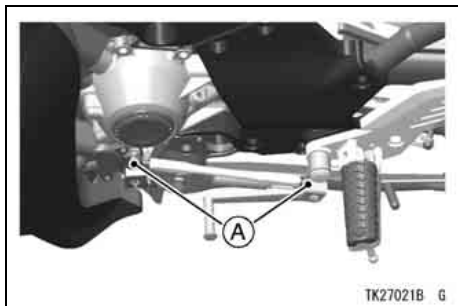

**A. Rubber Boot**

## 252 MAINTENANCE AND ADJUSTMENT

- If the boot is damaged, replace it with a new one. If the boot is not positioned in the groove correctly, replace it in the correct position.

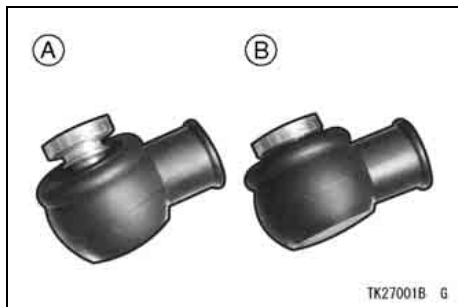

**A. Not Position**

**B. Correct Position**

### *Washing Your Motorcycle*

- Rinse your bike with cold water from a garden hose to remove any loose dirt.

- Mix a mild neutral detergent (designed for motorcycles or automobiles) and water in a bucket. Use a soft cloth or sponge to wash your motorcycle. If needed, use a mild degreaser to remove any oil or grease build up.
- After washing, rinse your motorcycle thoroughly with clean water to remove any residue (residue from the detergent can damage parts of your motorcycle).
- Use a soft cloth to dry your motorcycle. As you dry, inspect your motorcycle for chips and scratches. Do not let the water air dry as this can damage the painted surfaces.
- Start the engine and let it idle for several minutes. The heat from the engine will help dry moist areas.
- Carefully ride your motorcycle at a slow speed and apply the brakes several times. This helps dry the

brakes and restores them to normal operating performance.

### NOTE

- *After riding in an area where the roads are salted or near the ocean, immediately wash your motorcycle with cold water. Do not use warm water as it accelerates the chemical reaction of the salt. After drying, apply a corrosion protection spray on all metal and chrome surfaces to prevent corrosion.*
- *Condensation may form on the inside of the headlight lens after riding in the rain, washing the motorcycle or humid weather. To remove the moisture, start the engine and turn on the headlight. Gradually the condensation on the inside of the lens will clear off.*

### *Semi-gloss Finish*

To clean the semi-gloss finish;

- When washing the motorcycle, always use a mild neutral detergent and water.
- The semi-gloss finish effect may be lost when the finish is excessively rubbed.
- If any doubt, consult an authorized Kawasaki dealer.

### *Windshield and Other Plastic Parts*

After washing use a soft cloth to gently dry plastic parts. When dry, treat the windshield, headlight lens, and other nonpainted plastic parts with an approved plastic cleaner/polisher product.

**NOTICE**

**Plastic parts may deteriorate and break if they come in contact with chemical substances or household cleaning products such as gasoline, brake fluid, window cleaners, thread-locking agents, or other harsh chemicals. If a plastic part comes in contact with any harsh chemical substance, wash it off immediately with water and a mild neutral detergent, and then inspect for damage. Avoid using abrasive pads or brushes to clean plastic parts, as they will damage the part's finish.**

*Chrome and Aluminum*

Chrome and uncoated aluminum parts can be treated with a chrome/aluminum polish. Coated aluminum

should be washed with a mild neutral detergent and finished with a spray polish. Aluminum wheels, both painted and unpainted can be cleaned with special non-acid based wheel spray cleaners.

*Leather, Vinyl, and Rubber*

If your motorcycle has leather accessories, special care must be taken. Use a leather cleaner/treatment to clean and care for leather accessories. Washing leather parts with detergent and water will damage them, shortening their life.

Vinyl parts should be washed with the rest of the motorcycle, then treated with a vinyl treatment.

The sidewalls of tires and other rubber components should be treated with a rubber protectant to help prolong their useful life.


 **WARNING**

Rubber protectants can be slippery and, if used on the tread area, cause loss of traction resulting in accident causing injury or death. Do not apply rubber protectant to any tread area.


### Bolt and Nut Tightening

In accordance with the Periodic Maintenance Chart, it is very important to check the tightness of the bolts and nuts listed here. Also, check to see that each cotter pin is in place and in good condition. Please ask your authorized Kawasaki dealer for torque values.

1. Clutch Lever Holder Bolts
2. Steering Stem Head Bolt
3. Handlebar Mounting Bolts
4. Front Fork Clamp Bolts
5. Brake Lever Holder Clamp Bolts

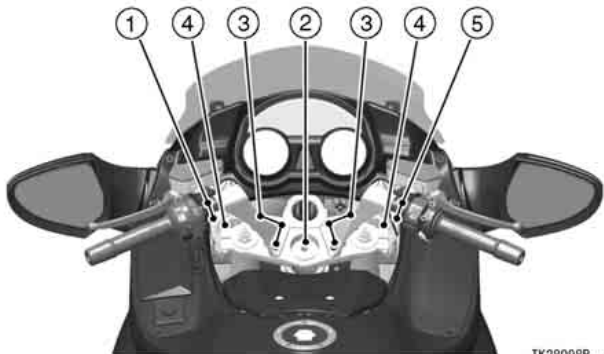


- 6. Front Fender Mounting Bolts
- 7. Engine Mounting Bolts and Nuts
- 8. Rear Frame Mounting Bolts
- 9. Brake Disc Mounting Bolts
- 10. Front Axle Clamp Bolts
- 11. Front Axle
- 12. Caliper Mounting Bolts
- 13. Side Stand Bolt
- 14. Swingarm Pivot Shaft Nut
- 15. Uni-trak Lever Rod Nuts
- 16. Footpeg Mounting Bolts
- 17. Rear Shock Absorber Mounting Nuts
- 18. Front Gear Case Mounting Bolts

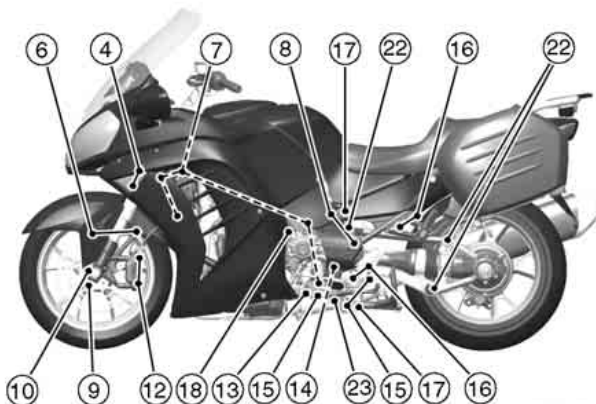

## 258 MAINTENANCE AND ADJUSTMENT

- 19. Silencer Mounting Bolts
- 20. Brake Pedal Bolt
- 21. Rear Axle Nut
- 22. Tetra Lever Bolts
- 23. Center Stand Bolts and Nuts

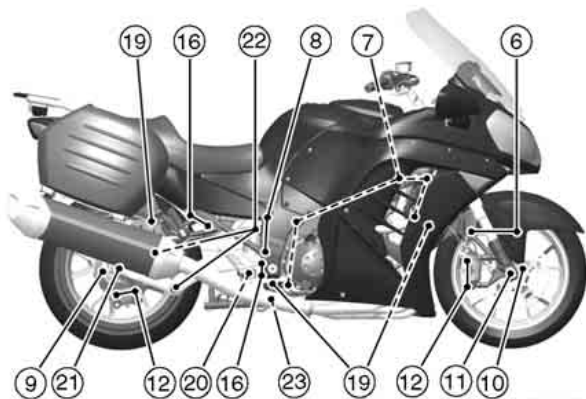

TK28100B G